



Remove your Stretch Screamer figure from the package.

To play:

Move the 3-position switch from "TM" (TRY-ME) to "ON".

In the "ON" Mode, the button on the leg will no longer work. This is normal.


Your Stretch Screamer is now ready to SCREAM! Pull on him, shake him, squeeze his head (but not too hard!) and let the fun begin!

ON/OFF SWITCH: If you want to play with your Stretch Screamer without the screaming sounds, simply turn the Switch on the bottom of his foot to the OFF position.

ATTENTION!!!

PLEASE READ THIS CAREFULLY TO FIND OUT

How to take care of your Stretch Screamer Monster

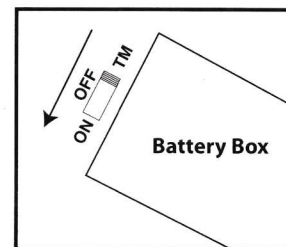

Your Stretch Screamer uses the latest in plastics technology to make it as strong and reliable as possible. However, there are some things **YOU CAN DO** to make sure your Monster will last for the longest time possible.

- 1) To Stretch your Monster, **ALWAYS** pull him from the feet or the legs.




- 2) Always avoid sharp objects. **DO NOT POKE** his skin or


any part of his body with any sharp object such as a pin or pencil point. The smallest hole will cause a major rip in his skin.

DO NOT WRAP your Stretch Screamer around any sharp objects as it may cut the skin.

- 6) **DO NOT LEAVE** your Stretch Screamer in direct sunlight.

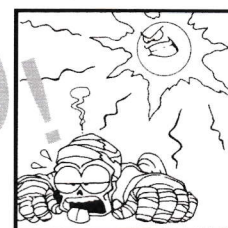

- 7) **DO NOT PLAY** with your Stretch Screamer in any form of water. Water will permanently damage his electronic circuits.

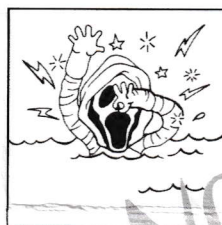

- 3) **DO NOT TWIST** the arms or head of your Stretch Screamer. The

material of his skin is designed to work only when pulling or stretching. Twisting it will result in the skin breaking.



- 4) **DO NOT PINCH** the "Balloon" effect in the head when it is popping out of the head.



- 5) **DO NOT STEP ON THE HEAD** of your Stretch Screamer. This will cause the "Balloon effect" to break! It is not designed for this extreme abuse. Squeeze the head by **ONLY** using the strength of your hands.



- 8) **ALWAYS PLAY SAFE!:** Do not wrap the arms of the figure around any person's head, arm, or leg. Do not tie the arms into any type of knot.



Be careful when releasing his arms and legs after Stretching. **DO NOT RELEASE THE ARMS OR LEGS QUICKLY** as they can move very rapidly. **ALWAYS** release your Stretch Screamer's arms and legs **SLOWLY** back to their original positions.



BATTERY CAUTIONS:

IMPORTANT: ONLY PARENTS SHOULD REPLACE BATTERIES.

- Use only alkaline batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Insert batteries as marked and always follow the toy and battery manufacturer's instructions.
- Use only the same or equivalent type of battery as recommended.
- Do not short-circuit the supply terminals.
- Do not mix old and new batteries. Do not mix different types of batteries, such as alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium).
- Always remove exhausted or dead batteries from the product.
- Remove batteries from the product before extended storage.

WARNING: Gelatin ingredients are nontoxic but will stain clothing, carpets, upholstery, or walls. In the event of skin or eye contact, rinse well with water.

For any questions, please try our service center before returning the product to the store
(310) 473-3842

TOY QUEST
A DIVISION OF MANLEY

01170

LOS ANGELES, CA 90064
ALL RIGHTS RESERVED
MADE IN CHINA
www.toyquest.com

